Bluetoothバーコードリーダー

バーコードリーダー本体最下部にコネクタを接続し、

PCやその他USBアダプターにUSBコネクターを接続することでチャージ可能です。

(充電中は上部 LEDランプが赤く点灯します)





## •初期設定

本体のレバーを引くと自動的に電源が入ります。

同封マニュアルの③ページの

「Initialization Setting」を読み込み、

「Serial Mode」を読み込みます。



Initialization Setting



Serial Mode

#### Notice :

- 1. The barcode scanner has been set well before delivery (wireless mode default). It can be used directly. Please do not scan the bar codes in the manual optionally to test the scanner. In case of scanning the setting bar codes and abnormal condition occurs, please scan 'initialization Setting' bar code and 'Serial Mode' bar code as below to reset factory defaults. After resetting default settings, you first need to reconnect with the Bluetooth adapter to use it again.
- The wireless adapter should be connected to the fixed computer USB interface. Do not plug in or pull out the adapter frequently in order to help improving the working efficiency and avoid man-





### Wired and Wireless Mode Switchover

If need to switch to wired mode, please scan 'Wired mode' setup bar code as below.



Wired mode

If need to switch back to wireless mode, please scan 'Wireless mode' bar code as below.



Wireless mode

#### Buzzer





High Soun

(3)

## ・モード設定

ケーブルモードとワイヤレスモードを選択できます。

同封マニュアルの③ページの

Wired and Wireless Mode Switchover O

「Wired mode」もしくは「Wireless mode」を読み込み、 ケーブルモード ワイヤレスモードを選択できます。

## Wired and Wireless Mode Switchover

If need to switch to wired mode, please scan 'Wired mode' setup bar code as below.



Wired mode

If need to switch back to wireless mode, please scan 'Wireless mode' bar code as below.



Wireless mode

#### Notice :

- 1. The barcode scanner has been set well before delivery (wireless mode default). It can be used directly. Please do not scan the bar codes in the manual optionally to test the scanner. In case of scanning the setting bar codes and abnormal condition occurs, please scan 'initialization Setting' bar code and 'Serial Mode' bar code as below to reset factory defaults. After resetting default settings, you first need to reconnect with the Bluetooth adapter to use it again.
- The wireless adapter should be connected to the fixed computer USB interface. Do not plug in or pull out the adapter frequently in order to help improving the working efficiency and avoid manmade damage.



Sorial Made

Initialization Setting

#### Wired and Wireless Mode Switchover

If need to switch to wired mode, please scan "Wired mode", setup har code as below



If need to switch back to wireless mode, please scan 'Wireless mode' bar code as below.



#### Buzzer





High Soun

(3

## ・ブザー音量設定

同封マニュアルの③ページの Buzzer の

「Low Sound」もしくは「High Sound」を読み込み、

ブザー音量の大小が設定できます。

## Buzzer



Low Sound



High Sound

(3)

#### Notice :

- 1. The barcode scanner has been set well before delivery (wireless mode default). It can be used directly. Please do not scan the bar codes in the manual optionally to test the scanner. In case of scanning the setting bar codes and abnormal condition occurs, please scan 'initialization Setting' bar code and 'Serial Mode' bar code as below to reset factory defaults. After resetting default settings, you first need to reconnect with the Bluetooth adapter to use it again.
- The wireless adapter should be connected to the fixed computer USB interface. Do not plug in or pull out the adapter frequently in order to help improving the working efficiency and avoid manmade damage.





### Wired and Wireless Mode Switchover

If need to switch to wired mode, please scan 'Wired mode' setup bar code as below.



Vired mode

If need to switch back to wireless mode, please scan 'Wireless mode' bar code as below.



Wireless mode

## Buzzer





3

## ·電源OFF時間設定

マニュアルの6ページの「Sleep Time」を読み込み、

お好みの長さのバーコードを読み込むと

電源OFFの長さを設定ができます。

「20秒」「30秒」「60秒」「2分」 「5分」「10分」「20分」「常時 ON」

マニュアルURL

http://9-106.net/BBR/bbm.pdf

# Sleep Time Setting Setup Instruction: Scan the time you want to set. 1. Scan 'Sleep Time' bar code Sleep Time **Dongle Mode Selection** simulate serial mode **Bluetooth Mode Selection** Language Selection (Bluetooth Module) America (default)

# •CapsLock ON/OFF 時の大文字/小文字切替

※CapsLock ON 時は逆の切替になります。

大文字切替



小文字切替



# ·Bluetooth 設定

本体のレバーを10秒ほど連続で引くと Bluetooth 設定が開始されます。

バーコード本体上部の表示部が 早い速度で青く点滅が始まります。





## ·Bluetooth 設定

設定を行いたい端末の Bluetooth 設定をONにし、

「BARCODE」を探し接続を行ってください。

接続が完了するとバーコードの読み込みが可能になります。



Apple WatchをiPhoneとペアリングするには、Watch Appを

使用します。

# ・スキャン時の注意点

Bluetooth の設定が完了すると バーコードの読み込みが開始できます。

キーボード設定が日本語入力設定の場合は

全角読み込みとなってしまいますので、

事前に英語入力設定にしてください。

PCの場合もバーコードを読み取る際は

「半角英数字」の設定で読み込ませてください。





※日本語設定の状態でBluetooth の設定した場合、

キーボードが見えない状態になりますので、


その場合は一旦、Bluetooth の設定をOFFにし、

キーボードの設定を英語に切り替えてから

再度Bluetooth の設定をONにしください。





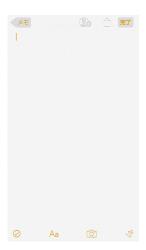



以上で基本的な設定は完了です。