

Bluetooth Barcode Scanner User Manual

Performance

- Comfortable and convenient to use
- Long life time button--3 million times
- Built-in chargeable lithium battery
- Strong decoding capability
- Suitable for IOS, Android, Windows 7, Windows 8, and Windows XP

Packing list

- 1*Bluetooth barcode scanner;
- 1*charging cable;
- 1*charger (optional);
- 1*Bluetooth adapter;
- 1*user manual



 
Warning:

1. Please pull out the power supply and cable from the scanner in stormy weather to avoid damaging.
2. Keep away from heat and maintain ventilation.
3. Keep away from water in the environment of storage, transportation and operation.
4. Please use the original Bluetooth adapter of the device.

Bluetooth Barcode Scanner Knowledge

Bluetooth barcode scanner is used for pairing with the devices like smart phones, tablet PC, etc. It is suitable for IOS, Android, Windows 7, Windows 8, and Windows XP systems. With the high-performance processor and decoder, it has a rapid decoding and high precision reading ability. Bluetooth barcode scanner is developed to meet the needs of the changing world.

Housing Design Description

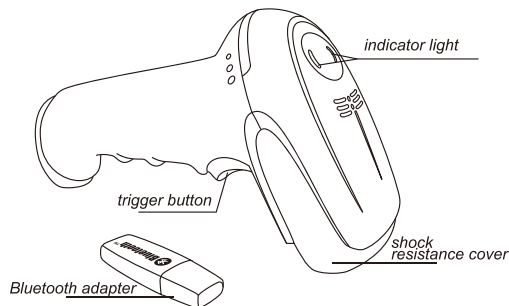

The Bluetooth adapter is used when the device has no Bluetooth function, for example, the desktop computer. If the device has Bluetooth function, the scanner can pair with the device directly without the adapter. For more details, please check the Bluetooth Adapter Installation Guide on page 2 to 3.

Technology Parameters

Physical Parameters

Size: 169mm*87mm*70mm

Weight: 135g±5g

Charging interface: RJ-45 plug, 2 meters (with 5V charger, red light for charging, green light for battery charged)

Housing material: ABS+PVC+PC

Performance Parameters

Light source: visible laser diode, wave length 650nm

Trigger mode: manual (long press the button to turn off the scanner)

Scanning mode: single line scanning

Scanning speed: 120 scans/sec

Resolution: ≥4mil

Error rate: 1/50million

Scanning resolution: minimum 35% contrast

Transmit frequency: Bluetooth

Transmit distance: visible distance 10m (customized)

Depth of scanning field: 10mm-600mm

Scanning angle: ±35°±65°±65°

Decoding capability: UPC/EAN/JAN, code 11, code 128, code 39, Chinese 2 of 5, Interleaved 2/5, Interleaved 2of 5, China post code, etc.

Prompt mode: beeper& LED

Setup mode: manual (scan the setting barcodes)

Laser safety level: EN60825-1, Class 1, National Class 1 Laser Safety Standard EMC

EMC: EN55022, En55024

Electric safety: EN60950-1

Electrical Parameters

Charging time: 4 hours

Charging voltage: DC5V±5%

Power: 50MW (operation), 500MW (maximum)

Currency: 50MA (operation), 100MA (maximum)

Environmental Parameters

Light intensity: 3000-12000LUX

Temperature: 0℃-50℃ (operation mode);-40℃-60℃(storage)

Package level: IP 52

Shock resistance: design to fall from 1.5 meters height from concrete surface

How to Use

Power On

Press the button. The scanner will emit two short beep sounds and the indicator light will blink. That means the scanner has been successfully turned on.

Power Off

The default shutdown time is 5 minutes. If there is no operation within 5 minutes, the buzzer will emit a long beep sound and then enter into sleep mode with the indicator light off.

2 ways to enter into Paring Mode In Wireless Mode

1. Press the button continuously for 10 seconds.
2. Scan "one-key pairing" bar code



(one-key pairing)

Attention please:

Do not press any button while pairing (blue LED flashes), otherwise pairing fails and it needs to be redone.

Bluetooth Adapter Installation Guide-Windows XP

1. Plug in the Bluetooth adapter. Bluetooth device icon will show on the system tray.
2. Double click the Bluetooth icon then the Bluetooth device dialog box will appear. (You can also click the Bluetooth device from the control panel.)
3. Click 'add' and the Bluetooth device wizard will show.
4. Scan the setup code 'One-Key pairing' or press the trigger button for 10 seconds in order to let the Bluetooth scanner get into matching condition. The blue LED light flashes quickly. Select 'My device is set up and ready to be found' and click 'next'.
5. There will be a Bluetooth device wizard dialog box that shows 'Barcode Scanner' icon. If not, click 'search again'.
6. Double click 'Barcode Scanner' icon and see the passkey dialog box.
7. Select 'don't use a passkey' and click 'next' to start installing the driver.
8. After installation, there will be an extra Barcode Scanner in the Bluetooth device and an extra HID Keyboard Device in the device manager. By this time the bluetooth adapter installation will be finished.
9. Now open any edit box like notepad to start reading and uploading bar codes.

Bluetooth Adapter Installation Guide-Windows 7

1. Plug in the Bluetooth adapter then the Bluetooth icon will appear.
2. Double click the Bluetooth icon and then the 'Devices and Printers' will appear.
3. Activate the scanner and scan the setup code 'One-Key Paring' or press the trigger button for 10 seconds, then blue LED light flashes quickly and the Bluetooth scanner enters to the matching condition.

4. Click 'add a device' and there comes a dialog box that shows 'Barcode Scanner'.
5. Right click the device icon and right click again to select the properties.
6. Select 'Drivers for keyboard, mice, etc [HID]' in the properties dialog box and click yes.
7. After installation there will be a balloon to show installation success. The device manager has a new HID keyboard device.
8. Now the Bluetooth installation finished. Open any edit box like notepad to start reading and uploading bar codes.

Bluetooth Adapter Installation Guide-Windows 8

1. Plug in the Bluetooth adapter.
2. Open 'control panel' and click 'add a device'.
3. Activate the scanner and scan the setup code 'One-Key Paring' or press the trigger button for 10 seconds, then blue LED light flashes quickly and the Bluetooth scanner enters to the matching condition.
4. Click 'add a device' and there comes a dialog box that shows 'Barcode Scanner'. Select the device and click 'next'.
5. Now the Bluetooth installation finished. Open any edit box like notepad to start reading and uploading bar codes.

Paired with Android/IOS/MAC Devices

1. Please confirm the scanner is in pairing mode. Otherwise, the device can't search the scanner.
2. Click the searched Bluetooth device directly. It can finish the pairing automatically.

Wired and Wireless Mode Switchover

If need to switch to wired mode, please scan 'Wired mode' setup bar code as below.



Wired mode

If need to switch back to wireless mode, please scan 'Wireless mode' bar code as below.



 
Wireless mode

Charging


Please connect the RJ45 interface of the charging cable to the bottom of the scanner and the USB interface to the computer. Or, connect the charger to the power socket. Charging time will be 2-3 hours. After fully charged, the scanner can work 8-12 hours continuously.

Reading Angle


- Maintain a bevel between the scanner and the barcode to make a best reading.
- Do not keep the scanner in 90° with the barcode, otherwise the scanner can't read.
- The scanner must aim at the barcode and the beam must cover the whole barcode. If don't, error maybe occur.




correct way of reading

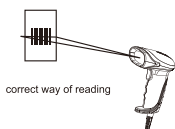 

correct way of reading

 

incorrect way of reading

 

incorrect way of reading

LED Indicator & Beeper

Indicator Light Color	Instruction
Green light and will be off soon	Reading successfully and comes a short beep
Red light always on	red = charging scanner no light = full charge
Blue light blinking	Press the button for 10 seconds. The blue light blinks and scanner enters into pairing mode. After pairing successfully, the blue light is on always.
Beeper Sound	Instruction
A short beep	Reading successfully
A long beep	Auto shutdown and enter into sleep mode
Two short beep	Power on
Three short beep	Fail to upload data. Please pair again
Three long beep	Low power, please charge.

Scanning Mode Setup

Setup Instruction :

1. Normal mode means real-time transmission. Scan 'Normal Mode' bar code, the scanner will be in real-time transmission.
2. In inventory mode, the scanner will save the bar code it reads. When need to upload the data to computer, scan 'Upload Data' bar code.
3. Scan 'Total Number of Data' bar code, the computer will show how many bar codes the scanner reads under inventory mode.
4. Scan 'Clear Data' bar code means clear all the bar codes being read under inventory mode.



Normal Mode



Continuous Mode



Inventory Mode



Non-volatile Mode



Upload Data



Total Number of Data



Clear Data

Sleep Time Setting

Setup Instruction:

1. Scan 'Sleep Time' bar code.
2. Scan the time you want to set.



Sleep Time



20 seconds



60 seconds



5 minutes



20 minutes



30 seconds



2 minutes



10 minutes



no sleep



France



Span



Italy



Russia

IOS International Keyboard Settings



Display/Hide



Double-click Display/Hide

Shutdown/Default value/Version information



Shutdown



Default value



Software Version



Hardware Version

Bluetooth Mode Selection



HID mode (default)



SPP mode

Language Selection (Bluetooth Module)



America (default)



Germany

Scanning mode



Default mode



Auto continuous scan



Scan delay



Single scan no trigger



Reading delay no trigger



Auto light flash lamp

Add bar Code ID



Close ID code
(Default)



Add ID code as prefix



Add ID code as suffix

Bar code front&behind CHAR settings



No hiding the front CHAR
(Default)



Hiding the blank in front
of the barcode



No hiding the behind CHAR
(Default)



Hiding the blank behind
the barcode



No hiding CHAR- in the middle
of barcode(Default)



Hiding the "-" of
the bar code



No replacing the "0" with
"A" in barcode(Default)



Replacing the "0" with
"A" in barcode

Upper /lower case transformation



Transformation closed



All is upper case



All is lower case



Upper /lower case transformation

language settings



America, China
(American English) Default



Spain (Spanish)



Denmark (Danish)



France (French)



Sweden, Finland
(Swedish, Finnish)



Czech Republic (Czech)



Turkish-Q



Croatia (Croatian)



Russia (Russian)



Canada (French)



Argentina
(Latin language)



United Kingdom (English)



Germany (German)



Slovakia (Slovak)



Belgium (Dutch)



Poland (Polish 214)



Hungary (Hungarian)



Netherlands (Dutch)



Brazil (Portuguese)



Italy (Italian 142)



Norway
(Northern Sami)



Portugal (Portuguese)



Turkish-F



Switzerland
(German, French)



Japan (Japanese)



Egypt (Arabic)

Notice :above language should be customized before delivery.

Code 39



Code 39 / On



Code 39 / Off



Code 39 ID Character "m"



Code 39 Full ASCLL(Default) / On



Code 39 Full ASCLL / Off



Code 39 MOD43 Check / Off



Code 39 MOD43 Check / ON



Transmit Check / On



Transmit Check / Off



Transmission Lead / Off



Transmission Lead / On



Verification Multiply / On



Verification Multiply / Off(Default)



Code 32 / Off



Code 32 / On
Remark: It affects the Code 39
when it is on



Code 39 TAB Mode

UPC A Code



UPC A Code / On (Default)



UPC A / Off



UPC A Code ID Character "e"



Transform Into EAN13 / ON



Transform Into EAN13 / OFF(Default)



Transmit Check Code (Default)



Do Not Transmit Check Code



Do Not Hide The System Character



Hide The System Character

UPC-E



UPCE / On (Default)



UPCE / OFF



UPCE ID Character "F"



Transform Into UPCA / On



Transform Into UPCA / OFF(Default)

EAN13



EAN13 / ON(Default)



EAN13 / OFF



EAN13 ID Character "D"



Transmit Check Code (Default)



Do Not Transmit Check Code (Default)



Transform Into ISBN / On



Transform Into ISBN / OFF(Default)



Transform Into ISSN / On



Transform Into ISSN / OFF(Default)



Verification Multiply / On



Verification Multiply / OFF

EAN8



EAN 8 / On



EAN 8 / OFF



EAN 8 ID Character "C"



Transmit Check Digit(Default)



Do Not Transmit Check Digit(Default)



Hide The System Digit



Do Not Hide The System Digit (Default)

Additional Code



Five Digit Additional Code / On



Two Digit Additional Code / On



Two & Five Digit Additional Code / On



Additional Code / OFF

Code93



Code 93 / ON(Default)



Code 93 / OFF



Code 93 ID Character "I"



Verification Multiply / On



Verification Multiply /OFF(Default)



Code 93 MOD47 / On (Default)



Code 93 MOD47 / OFF

Code128



Code 128/ ON (Default)



Code 128/ OFF



Code 128 ID Character "a"



Verification Multiply /OFF(Default)



Verification Multiply / On

codabar



Codabar / On



CodaBar / Off



Codabar ID Character "V"



Setting The Minimum Length "4"



Setting Stop/Start Character / On



Setting Stop/Start Character / Off



Verification Multiply /On



Verification Multiply /OFF

Code 25



Cross Code 25 / On



Cross Code 25 / Off



Cross Code 25 ID Character "n"



Verification Multiply / Off(Default)



Verification Multiply / On



Industrial Code 25 / On (Default)



Industrial Code 25 / Off



Industrial Code 25 ID Character "o"



Verification Multiply / Off (Default)



Verification Multiply / On (Default)

MSI Code



MSI Code / On



MSI / Off



MSI Code ID Character "s"



Setting The Minimum Length "4"



Verification Multiply / Off



Verification Multiply / On

Code11



Code 11 / On



Code 11 / Off



Code 11 ID Character "u"



Setting The Minimum Length "4"



Verification Multiply / Off



Verification Multiply / On



CK Check Automatically



CK Check (Default)



CK Check

Code 25



Matrix Code 25 / On
(Default)



Matrix Code 25 / Off



Matrix Code 25 ID
Character "q"



Post Code 25 / On



Post Code 25 / Off



Post Code 25 ID
Character "r"

Transform between EAN, ISBN And ISSN



All EAN Transform Into ISBN



EAN Transform Into ISBN
Compulsive / Off(Default)



All EAN Transform Into ISSN



EAN Transform Into ISSN
Compulsive / Off(Default)

Prefix & Suffix Setting



All codes add suffix CR



All codes add suffix CR+CR



LF all codes add suffix ETX



All codes add prefix F2



All codes add suffix F2



All codes add suffix
format CHARS-disable



All codes add prefix STX



All codes add prefix disable



Set to add prefix



Set to add suffix



Quit out prefix and
suffix adding mode




















































Clear all prefix CHARS



Clear all suffix CHARS

Character List

 SOH	 STX	 ETX
 EOT	 ENQ	 ACK
 BEL	 Backspace	 TAB
 Line feed	 VT	 FF
 Enter	 SO	 SI
 DLE	 DC1	 DC2
 DC3	 DC4	 NAK
 SYN	 ETB	 CAN
 EM	 SUB	 ESC
 FS	 GS	 RS
 US	 SPACE	 !
 "	 #	 \$

 %	 &	 '
 ()	 *
 +	 ,	 -
 .	 /	 0
 1	 2	 3
 4	 5	 6
 7	 8	 9
 :	 ;	 <
 =	 >	 ?
 @	 A	 B
 C	 D	 E
 F	 G	 H

